

The logo for the Asia Industrial Gases Association (AIGA), consisting of the letters 'AIGA' in a bold, white, sans-serif font centered within a solid blue square.

**THE SAFE DESIGN,
MANUFACTURE, INSTALLATION,
OPERATION AND MAINTENANCE
OF VALVES USED IN LIQUID
OXYGEN AND COLD GASEOUS
OXYGEN SYSTEMS**

AIGA 094/16

Asia Industrial Gases Association

3 HarbourFront Place, #09-04 HarbourFront Tower 2, Singapore 099254

Tel : +65 62760160 Fax : +65 62749379

Internet : <http://www.asiaiga.org>



THE SAFE DESIGN, MANUFACTURE, INSTALLATION, OPERATION AND MAINTENANCE OF VALVES USED IN LIQUID OXYGEN AND COLD GASEOUS OXYGEN SYSTEMS

As part of a programme of harmonization of industry standards, the Asia Industrial Gases Association has issued the publication 94 '*The safe design, [manufacture, installation, operation and maintenance of valves used in liquid oxygen and cold gaseous oxygen systems]*', jointly produced by members of the International Harmonisation Council and originally published by the European Industrial Gases Association (EIGA) as IGC Doc 200, '*The safe design, manufacture, installation, operation and maintenance of valves used in liquid oxygen and cold gaseous oxygen systems*'.

This publication is intended as an international harmonized publication for the worldwide use and application by all members of Asia Industrial Gases Association (AIGA), Compressed Gas Association (CGA), EIGA, and Japan Industrial and Medical Gases Association (JIMGA). Regional editions have the same technical content as the EIGA edition, however, there are editorial changes primarily in formatting, units used and spelling. Also, any references to regional regulatory requirements are those that apply to European requirements.

Disclaimer

All technical publications of AIGA or under AIGA's name, including Codes of practice, Safety procedures and any other technical information contained in such publications were obtained from sources believed to be reliable and are based on technical information and experience currently available from members of AIGA and others at the date of their issuance.

While AIGA recommends reference to or use of its publications by its members, such reference to or use of AIGA's publications by its members or third parties are purely voluntary and not binding.

Therefore, AIGA or its members make no guarantee of the results and assume no liability or responsibility in connection with the reference to or use of information or suggestions contained in AIGA's publications.

AIGA has no control whatsoever as regards, performance or non performance, misinterpretation, proper or improper use of any information or suggestions contained in AIGA's publications by any person or entity (including AIGA members) and AIGA expressly disclaims any liability in connection thereto.

AIGA's publications are subject to periodic review and users are cautioned to obtain the latest edition

Table of Contents

1	Introduction.....	1
2	Scope	1
3	Definitions.....	1
3.1	Publication terminology.....	1
3.2	Technical definitions.....	2
4	Oxygen properties, hazards and hazard analysis and risk assessment.....	2
4.1	Oxygen properties.....	2
4.2	Oxygen hazards.....	3
4.3	Oxygen hazard analysis and risk assessment.....	3
5	Kindling chain, ignition mechanisms, and contributing factors.....	6
5.1	Kindling chain and ignition mechanisms.....	6
5.2	Contributing factors.....	9
6	Material selection	9
6.1	Selection of metallic materials	9
6.2	Metallic material ranking	11
6.3	Selection of non-metallic materials	12
6.4	Specific requirements for lubricants and locking compounds.....	13
7	Design philosophy	14
7.1	General system design	14
7.2	Valve design.....	14
8	Valve cleaning for oxygen service.....	19
8.1	Valve cleaning strategy.....	19
8.2	Cleanliness inspection	20
8.3	Standard of cleanliness.....	20
8.4	Packaging, storage and handling.....	20
8.5	Records.....	21
9	Site installation	21
10	Operations	22
10.1	Personnel	22
10.2	Isolation, drain and vent valves.....	22
10.3	Pressure relief valves	22
10.4	Pressurizing piping systems.....	23
10.5	Valve leaks	23
10.6	Shutdown and startup of piping systems	23
11	Maintenance	23
11.1	General considerations	23
11.2	Maintenance strategy of valves.....	25
11.3	Assembly and installation.....	26
11.4	Spares	27
11.5	Supervision and inspection	28
11.6	Documentation	28
11.7	System restart after maintenance	28
12	Training.....	28
12.1	Training scope and elements of the training programme.....	29
13	Quality assurance, quality control measures for valves and spare parts	29

13.1 Valve manufacturer control 30

13.2 Construction site management..... 31

14 References 32

Figure 1 Flowchart showing an oxygen hazard analysis..... 5

Figure 2 Generic kindling chain 7

Figure 3 Example for a bypass system 16

Table 1 Typical metallic materials for specific cold oxygen valve internal components 11

1 Introduction

This publication has been prepared by a group of experts in air separation technology or oxygen equipment representing oxygen manufacturers and is based on technical information and experience currently available.

The use of incompatible materials, unsuitable lubricants, improper cleaning and/or ingress of impurities and procedural failures have been identified as root causes of a number of severe incidents involving liquid oxygen valves with concentrations greater than 90 mol % which occurred over the past few years. This indicates the need for continual improvement in the fundamental knowledge of design, material selection, manufacturing, cleaning, installation, operation and maintenance processes related to valves in liquid oxygen service. This is necessary for liquid oxygen valve specifiers, suppliers and manufacturers as well as those who clean, assemble, install, operate and maintain these valves.

In order to avoid similar incidents with potentially fatal consequences, requirements for cold oxygen systems are outlined in this publication.

The information contained in this publication only applies to new installations designed after the publication of this document and not to existing installations. However, the information contained in this publication may benefit existing installations or those in the project phase. Furthermore, to the extent that they exist, national laws may supersede the practices included in this publication. It should be noted, that all local regulations, tests, safety procedures, or methods are not included in this publication and that abnormal or unusual circumstances could warrant additional requirements.

The industrial gases industry has demonstrated that personnel who are involved in the design, selection, manufacturing, handling, cleaning, installation and maintenance of valves in cold oxygen service require training in these respective areas

2 Scope

This publication covers isolation valves, control valves, check valves, pressure relief valves and drain and vent valves in air separation units (ASUs) and their backup and storage piping system. It addresses the design, material selection, manufacturing, cleaning, installation, operation and maintenance of oxygen service valves operating at temperatures below -30 °C.

Valves in warm service connecting instrumentation devices are excluded from the scope of this publication. Although this publication is for ASUs, some of the principles may be used for other cold oxygen installations.

3 Definitions

3.1 Publication terminology

3.1.1 Shall

Indicates that the procedure is mandatory. It is used wherever the criterion for conformance to specific recommendations allows no deviation.

3.1.2 Should

Indicates that a procedure is recommended.

3.1.3 May

Indicates that the procedure is optional.

3.1.4 Will

Used only to indicate the future, not a degree of requirement.

3.1.5 Can

Indicates a possibility or ability.

3.2 Technical definitions

3.2.1 Burn resistant metals or metal alloys

Metals or metal alloys that, after being subjected to an ignition event, either will not burn or exhibit burn quenching behaviour, resulting in minimal consumption under specific process conditions that the metal experiences.

3.2.2 Cold oxygen

Liquid, supercritical fluid or cold gas with a temperature less than -30°C and an oxygen concentration greater than 23.5 mol%.

3.2.3 Non-metallic material

Any material, other than metal, or any composite material in which the metal constituent is not the most easily ignited component and for which the individual constituent cannot be evaluated independently (see ASTM G63 *Standard Guide for Evaluating Nonmetallic Materials for Oxygen Service* [1]¹).

3.2.4 Valve manufacturer

Organization that manufactures a valve assembly and is responsible for its design.

3.2.5 Valve specifier

Individual or organization that has responsibility for defining technical and/or procurement requirements for oxygen valves, and their actuation systems where applicable.

3.2.6 Valve supplier

Organization that supplies a complete oxygen valve. This can be a valve manufacturer or a third party.

4 Oxygen properties, hazards and hazard analysis and risk assessment

4.1 Oxygen properties

Oxygen, which is essential to life, is colourless, odourless and tasteless. The normal concentration in air is approximately 21% by volume.

The presence of an oxygen enriched atmosphere cannot be detected by human senses. Oxygen also does not produce any physiological effects that could alert personnel to the presence of oxygen enrichment. Increasing the oxygen concentration of the air at atmospheric pressure does not constitute a significant health hazard.

At atmospheric pressure liquid oxygen boils at -183 °C, and has a slight blue colour.

¹ References are shown by bracketed numbers and are listed in order of appearance in the reference section.

Oxygen is heavier than air. It can accumulate in low lying areas such as pits, trenches and underground cavities or rooms. This is particularly relevant when there is a cold oxygen spill. In that case, the generated cold gaseous oxygen is three times heavier than air.

4.2 Oxygen hazards

Oxygen is not flammable but supports and accelerates combustion. Oxygen concentrations higher than 23.5% create fire hazards but not asphyxiation hazards. Flammable materials, including some materials that are normally relatively non-flammable in air, burn very rapidly in high oxygen concentrations. As concentrations increase above 23.5% oxygen, ease of ignition of clothing increases dramatically. Once ignited by even a relatively weak ignition source such as a spark or cigarette, clothing can burst into flames and burn rapidly. Above 40% oxygen, the fibres on clothing and body hair and oil are subject to flash fire when ignited which spreads rapidly over the entire exposed surface.

Personnel should not be exposed to oxygen-enriched atmospheres because of the increased risk of fire. Areas where it is possible to have high oxygen content shall be well ventilated. Vents shall be piped outside of buildings or to a safe area. Where an oxygen-enriched atmosphere is possible, special precautions shall be taken such as installation of oxygen analysers with alarms, ensuring a minimum number of air changes per hour, implementing special entry procedures, or a combination of these procedures. Warning signs shall be posted at all entrances to alert personnel to the potential hazard of an oxygen-enriched atmosphere. For additional information on oxygen hazards, see AIGA 005, *Fire Hazards of Oxygen and Oxygen Enriched Atmospheres* [2].

4.3 Oxygen hazard analysis and risk assessment

The three elements necessary for an oxygen valve fire to occur are an ignition source, oxygen and a flammable material (fuel). Since oxygen is assumed to be present in all liquid oxygen or cold gaseous oxygen systems, it is important to have a clear understanding of any potential ignition sources and mechanisms present in the system as well as good knowledge of the flammability properties of the materials present in the valve.

An oxygen hazard analysis is a method used to evaluate risk of fire in an oxygen system. It assesses the probability of ignition or consequence of ignition (ignition versus sustained burning based on operating conditions). It can be used to select materials for new designs or to evaluate the compatibility of materials in existing valves. In general, acceptance criteria for materials in a given application depend on two key factors, ignitability and flammability. Various processes for oxygen hazard analysis have been published over the years with different steps to assess the probability of ignition and sustained combustion

A risk assessment shall be carried out by personnel with knowledge and training in the field of oxygen compatibility and familiar with relevant CGA, EIGA, AIGA, American Society for Testing and Materials (ASTM) and other applicable standards.

The oxygen hazard analysis process includes the following steps as shown in Figure 1.

1) Assemble required information and resources:

- application conditions (oxygen concentration, pressure, temperature, etc.) with particular attention to transient conditions (i.e. cooldown) and worst-case scenarios (for example, valve failure) of the oxygen system for which the valves are used;
- references of valves used in similar operating conditions, see 13.1.2;
- assembly and component drawings, materials of construction and flammability data for materials;
- procedures used during manufacturing, cleaning, installation, operation and maintenance; and

- experienced personnel/team familiar with relevant industrial guidelines (CGA, EIGA, AIGA, ASTM and other applicable standards).
- 2) Evaluate the flammability of materials in application pressure and minimal cross sectional thickness.
 - 3) Evaluate probability of ignition based upon contributing factors present:
 - review potential for contamination;
 - review type and location of non-metals;
 - review type and location of metal trim and determine location of thin sections on trim and valve body/bonnet; and
 - assess and document location of potential ignition mechanisms (such as friction, mechanical impact) and possible kindling chain, particularly with respect to location of non-metals and thin metal sections.
 - 4) Evaluate potential consequences of a fire on personnel, equipment and operations.
 - 5) Recommend changes to reduce probability of ignition or eliminate or mitigate risk of ignition/kindling chain and hazards to personnel, equipment, and operation. Mitigation steps include:
 - eliminate or minimize mass of non-metal component(s);
 - use non-metals with a higher auto ignition temperature (AIT), higher mechanical impact resistance and lower heat of combustion ;
 - use burn resistant alloys suitable for the operating conditions;
 - design so metal components are at a thickness that is burn-resistant suitable for the operating conditions;
 - design to protect non-metals by avoiding contact with direct flow and encapsulation in metal as much as possible;
 - change operating parameters for transient/worst-case scenarios; or
 - mitigate consequences through isolation/barriers.
 - 6) Document results of oxygen hazard analysis, including specific design drawings, bill of materials, cleaning documents and certifications, recommendations, resulting design and/or process changes, hazards identified and mitigation steps.

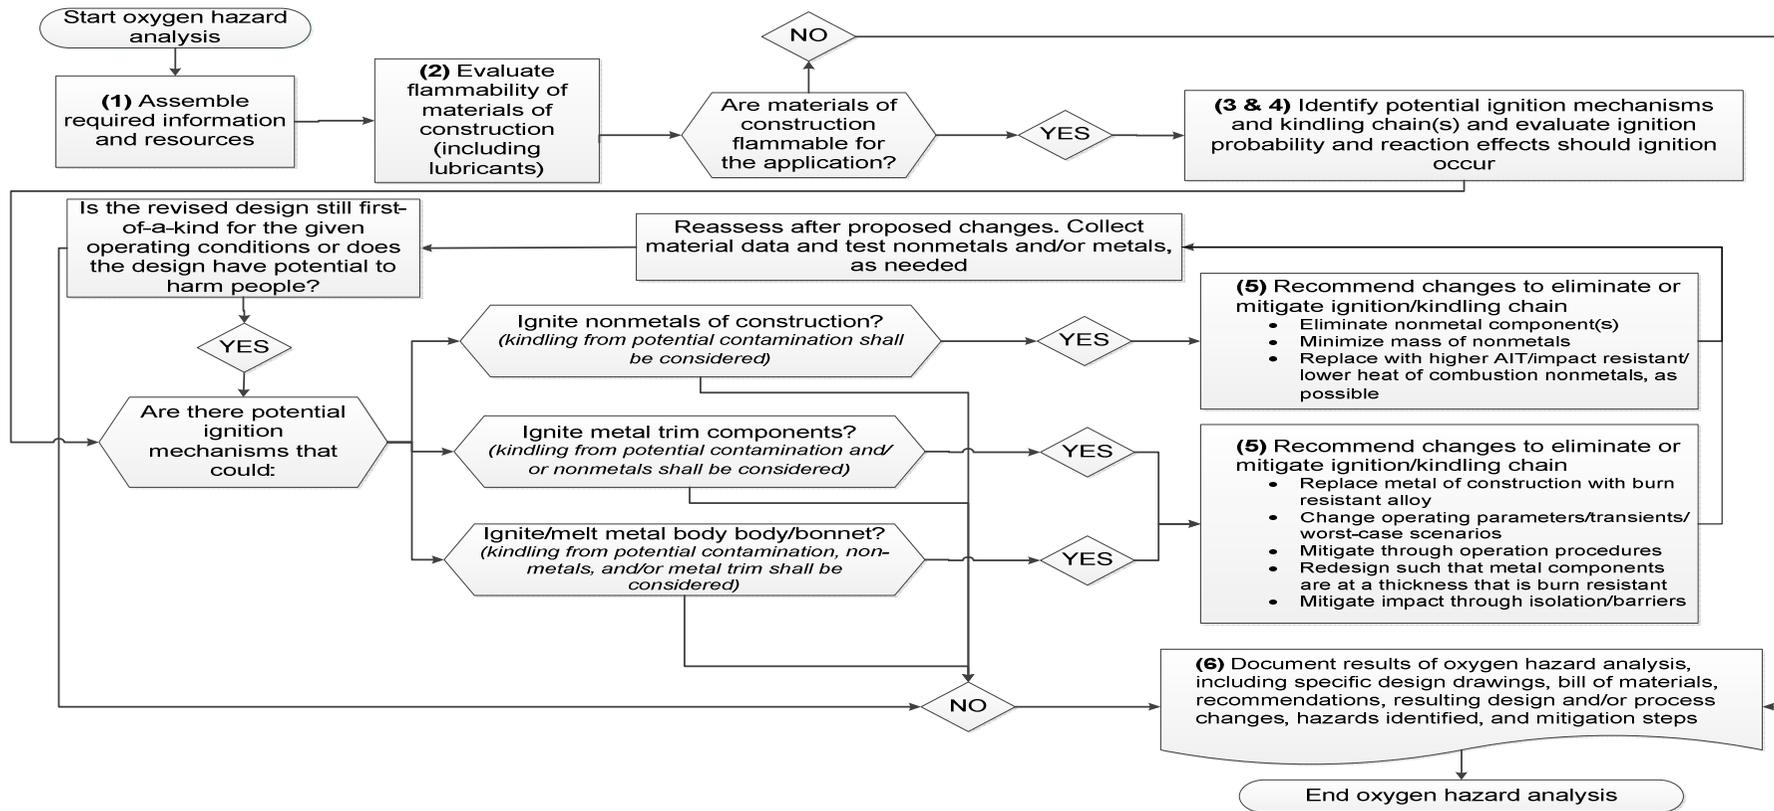


Figure 1 Flowchart showing an oxygen hazard analysis

5 Kindling chain, ignition mechanisms, and contributing factors

5.1 Kindling chain and ignition mechanisms

The most common ignition mechanisms (thermal energy sources) are the result of improper system or component cleaning, improper operation or improper maintenance. System parameters such as oxygen concentration, pressure, gas velocity and temperature are factors influencing ignition mechanisms and propensity for material ignition and combustion.

In a kindling chain, an easily ignitable material (such as contamination in the system or a non-metallic component) ignites and the energy released from this combustion ignites a more ignition resistant material, which in turn ignites an even more ignition resistant material (such as a metallic component). The kindling chain process is a function of each material's inherent minimum ignition energy requirement, heat of combustion and heat transfer (thermal conductivity) characteristics. The combustion propagation rate of a material, once ignited, becomes a factor of its chemical composition and physical and mechanical properties including thickness and surface area to mass ratio. The kindling chain is minimized by ensuring the system is cleaned for oxygen requirements and that the metals and non-metals present have a low probability for ignition and combustion propagation if ignited see AIGA 021, *Oxygen piping and pipeline systems*, [3]. Design features such as heat sinks and fire stops, can also help mitigate ignition and combustion propagation via efficient heat transfer mechanism.

Figure 2 is a representation of a generic kindling chain showing successive ignition and combustion from what typically are the easiest to most difficult to ignite components in a valve. The energy gap shown can be defined as the difference in the maximum baseline thermal energy generated during operation and the thermal energy required to ignite the most flammable component or contaminant, if present. Also shown in Figure 2 are example strategies and approaches for two risk mitigation methods that can be used in conjunction with one another. These are:

- reduce the probability of ignition by eliminating, ignition mechanisms, where possible; and
- increase the burn resistance of valve components in order to disrupt successive ignition/combustion (i.e. break the kindling chain) to both decrease the probability of metal combustion and impact severity of an event in a valve.

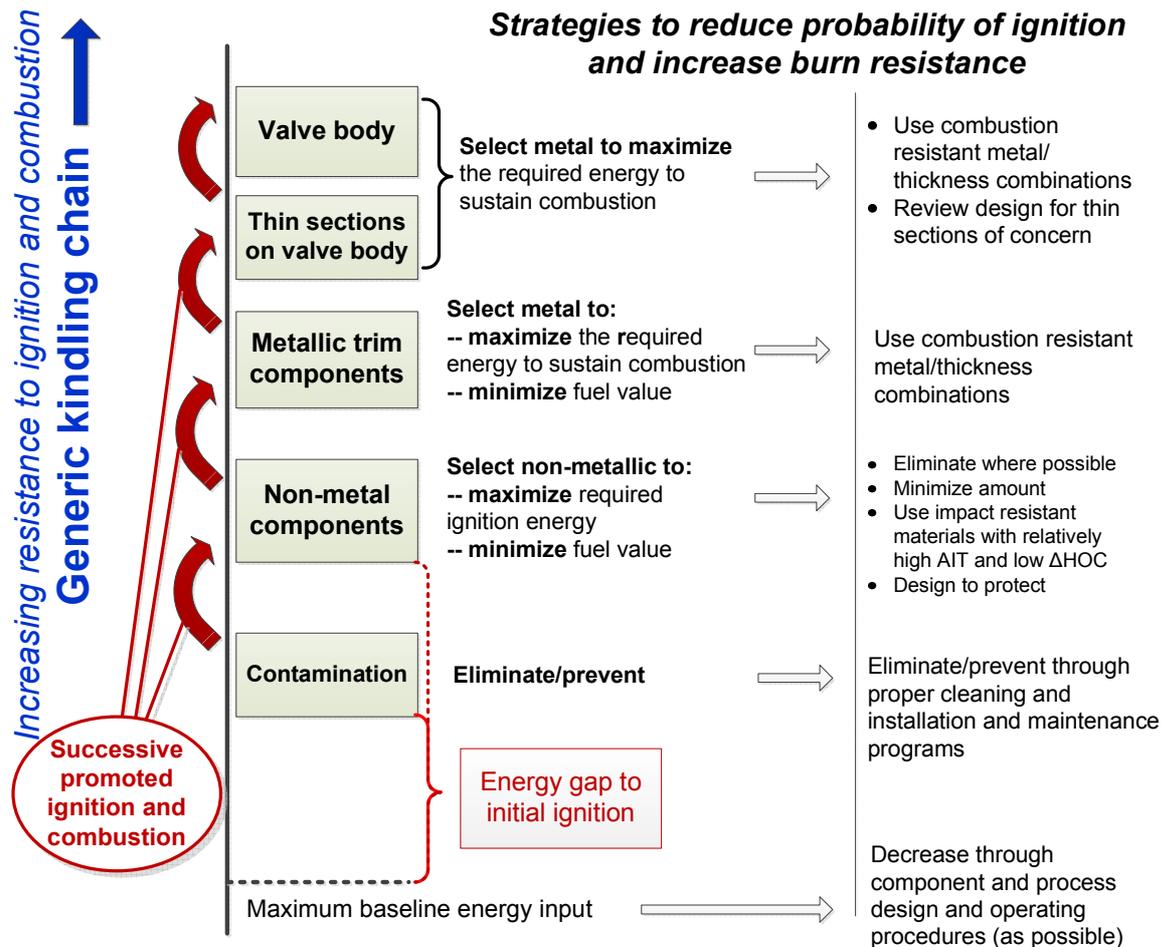


Figure 2 Generic kindling chain

5.1.1 Kindling chain

Contamination is a common link in the kindling chain. Contamination sources include but are not limited to:

- dirt, debris, particles, hydrocarbons (hydrocarbon lubricants, machining oils, etc.) and cleaning agent residues remaining in a valve due to improper cleaning, entering a valve during assembly or from accessories like actuators and gearboxes ;
- lubricants or thread sealants that migrate from threads or non-wetted areas;
- contaminated compatible lubricant (metallic particles and hydrocarbons);
- metallic flakes and particles formed during assembly;
- particulates originating from breakdown of seals, valve friction, shearing metal pieces, cavitation, degradation of non-metallic components and migration of impurities from gaskets, packing and seat material;
- items accidentally dropped into the system by personnel; and
- environmental contamination from improper, unprotected storage.

5.1.2 Ignition mechanisms

Several common ignition mechanisms are:

5.1.2.1 Frictional heating

Frictional heating can occur between stationary and moving parts, that is with relative motion, and can occur with both metallic and/or non-metallic materials. This can be due to poor design or when gaps or clearances become reduced during operation. This can also produce particles. Frictional heating is one of the most active ignition mechanisms in cold oxygen systems.

5.1.2.2 Particle Impact

Particle impact is considered an unlikely ignition mechanism in liquid oxygen. Although some high pressure gaseous oxygen incidents have been attributed to particle impact there are no known liquid oxygen incidents that have been attributed to particle impact. The main barriers to ignition by particle impact are low velocities in liquid oxygen and the low operating temperature. In addition, credit may be taken in systems where any particles in the liquid oxygen are removed. For example, by pump inlet filters leaving the pressurized cold oxygen systems particle free. Therefore, particle impact is more of a hazard for cold gaseous oxygen.

During transient conditions such as the cooling down or warming up of a cold oxygen system or during upset conditions, vaporized oxygen is present in the system. In this case, potentially flammable particulate contamination can ignite and kindle target metals by impingement at high gaseous oxygen velocities.

5.1.2.3 Mechanical impact

Heat is generated from the transfer of kinetic energy as a result of single or repeated impact of non-metal or metal resulting from vibration, quick closing valve, chattering check or relief valve. This mechanism was identified as the energy source for many liquid oxygen incidents including when two phase conditions were present leading to the ignition of non-metallic materials used for valve seats or seals. Direct mechanical impact on bulk metal alone is not considered to be credible for ignition of most metals.

5.1.2.4 Dry boiling and pool boiling

By their nature, liquid oxygen systems in cryogenic air separation face the additional risk of hydrocarbon accumulation wherever boiling of liquid oxygen occurs. However, this ignition mechanism is more related to process and system design and not directly related to cold oxygen valves.

5.1.2.5 Adiabatic compression

Heat is generated when a gas is rapidly compressed from low pressure to high pressure. Ignition by adiabatic compression is usually considered as non-active in liquid oxygen. It can be active in transient conditions such as the cooldown or warm-up sequence of a cold oxygen system. This can be sufficient to reach the AIT of non-metallic materials and organic contaminants directly exposed to the adiabatic compression and to ignite these materials.

5.1.2.6 Electrical arcing

Electrical arcing from a power source with sufficient energy to ignite the material receiving the arc-lightning strikes and electrical surge of non-grounded system could cause ignition when it arcs to a metallic flammable material.

5.1.2.7 Static discharge

Ignition can occur when a static charge discharges with enough energy to ignite the material receiving the discharge or exposed to the discharge energy. Static discharge is more likely to occur in a dry environment, which is the case in cold oxygen systems.

5.2 Contributing factors

The following factors in combination with ignition mechanisms in 5.1 can influence the probability and/or severity of an incident:

- personnel exposure in the immediate vicinity of a cold system when started, shutdown or in operation;
- oxygen leak leading to upset conditions (for example, oxygen enrichment, dry boiling and high velocity);
- rapid vaporization/flashings, cavitation;
- mechanical failure/rupture of a component of a valve;
- excessive vibration resulting from incorrect internal valve clearances, improper assembly or excessive piping loads;
- contamination of any kind (which can be present or introduced into the system) due to inadequate cleaning, residual contamination from cleaning agents/cleaning process, contaminated soft-goods and/or lubricants, post cleaning testing such as hydro testing, packaging, site assembly, and maintenance procedures;
- mechanical stress due to sudden temperature changes;
- deficiencies in surface quality of functional valve parts; or
- not following operating or maintenance procedures.

6 Material selection

The information from the publications referred to in this section should be used to apply the burn resistant method as shown in Figure 2.

6.1 Selection of metallic materials

The metallic material shall be suitable for the mechanical service, including resistance to cold embrittlement.

The ability to ignite and sustain combustion of metallic components in any given oxygen application is a function of several process and design related factors including, but not limited to:

- concentration, pressure, velocity and temperature of the oxygen;
- component geometry and dimensions;
- ignitability and combustion characteristics of the metal itself; and
- close proximity to non-metals (one possibility for the presence of an ignition mechanism and kindling chain from non-metal to metal).

Metal properties and conditions affecting potential ignitability and flammability include:

- thermal conductivity;
- heat of combustion;
- mass and its geometry (thick versus thin);

- oxygen concentration and pressure;
- presence of gaseous versus liquid oxygen; and
- flow conditions before and after ignition.

Refer to ASTM G94, *Standard Guide for Evaluating Metals for Oxygen Service* [4].

Table 1 provides a list of metals typically used for cold oxygen valve internal components, where active ignition mechanisms are possible. These components include:

- stem/shaft;
- seat/seat retainer/encapsulated seat;
- valve seal/laminated compound valve seal;
- axial/radial earing/thrust bearing;
- washer/bearing washer;
- guide bushing/spacer bushing;
- follower/gland follower/packing gland;
- plug;
- cage;
- disc/disc holder;
- ring
- spring;
- plug nut; or
- pin.

These metals are generally more resistant to ignition and combustion propagation and significantly minimize kindling chain potential versus other metallic materials. [Aluminium bronze with aluminium content greater than 0.1% shall not be used. Certain metals at sufficient thickness can provide additional protection over other metals. A method used to rank metallic materials according to their relative burn resistance is discussed in this section. It should be noted that the metals shown in Table 1 are grouped according to their family and the order does not represent any specific ranking of their relative ignition and combustion potential in oxygen or the relative frequency of use.

Other metallic materials, such as forged and cast austenitic stainless steels have been widely and successfully used for valve bodies and internals and are considered acceptable for use in cold oxygen valves applications when

- it has been determined through an oxygen hazard analysis and risk assessment that no active ignition mechanism and kindling chain can be present; or
- the selected metal material is burn resistant at its applied minimum thickness for the given valve component and operation parameters.

An oxygen hazard analysis and risk assessment by personnel familiar with relevant industrial publications (CGA, EIGA, AIGA, ASTM and other applicable standards) should consider that active metal ignition mechanisms can occur due to inadvertent causes (for example, failure to remove or prevent contamination) and can be different between steady state operation and transient conditions or process upsets, including those in which gaseous oxygen can be present.

Table 1 Typical metallic materials for specific cold oxygen valve internal components

Engineering alloys	UNS numbers
Copper alloys	
Brass alloys	C46400/C92200/C83600/C44300/C36000/C23000/C37000/C37700/C27000/C69400
Copper	C10100
Copper nickel alloys	C71500
Bronze alloys ¹⁾	C93200/C90300/C93600/CC52100/C65500/C51900
Cobalt alloys	
Stellite 6	R0006
Stellite 6B	R0016
Nickel alloys	
Hastelloy C-276	N10276
Inconel 600	N06600
Inconel 625	N06625
Inconel X-750 ²⁾	N07750
Monel 400	N04400
Monel K-500	N05500
Nickel 200	N02200
<p>NOTE The alloys listed are grouped according to the alloy family and the order does not represent any specific ranking of their relative ignition and combustion potential in oxygen or the relative frequency of use.</p> <p>¹⁾ Aluminium bronze with aluminium content greater than 0.1% shall not be used</p> <p>²⁾ Verify suitability for service temperature</p>	

6.2 Metallic material ranking

ASTM G94 provides guidance for selecting metallic materials for oxygen service [4]. Some of the data listed in ASTM G94 are based on ASTM G124, *Standard Test Method for Determining the Combustion Behavior of Metallic Materials in Oxygen-Enriched Atmospheres* that provides a test method for comparing the flammability characteristics of metallic materials in gaseous oxygen [4, 5]. In this test, sample rods of a metal are intentionally ignited at a specific oxygen concentration, temperature and pressure and compared against burn/no-burn criteria. The test can also be used to show the relative flammability characteristics of a specific metal at different thicknesses.

However, ASTM G124 test method does not provide criteria for relating the data to the suitability of a metal for use in any specific oxygen application, (i.e. warm or cold oxygen) or design configuration [5]. The data does provide a useful basis for selecting metallic materials based on their relative flammability behaviour in gaseous oxygen, in the event any ignition mechanism becomes active.

NOTE. Based on the thermal energy required to raise a metal's temperature to its ignition temperature, the local environment around the ignition point is likely to become gaseous oxygen and if combustion occurs and continues, the burning region is also likely to remain in gaseous oxygen due to the combustion energy release rapidly vaporizing the surrounding liquid oxygen.

ASTM G124 data can provide some guidance in alloy selection from a combustion propagation standpoint based on test conditions in warm gaseous oxygen [5]. The ASTM G124 test data should be carefully considered if used as a reference for metallic material evaluation for cold oxygen applications [5]. First and foremost, it is imperative that selection of suitable metallic materials for cold oxygen applications take into account the function of the valve, the mechanical properties required for valve components for the specific cryogenic application.

Operating in liquid oxygen service provides an additional safety margin against ignition due to cryogenic temperatures compared to cold gaseous oxygen service. As a consequence, materials other than those listed in Table 1 could be acceptable following an oxygen hazard analysis and risk assessment. This is because of the greater thickness for valve bodies.

6.3 Selection of non-metallic materials

Non-metallic materials are widely used for bonnet gaskets, valve seats, seals, valve packing and similar components of valves to reduce friction and to minimize gas or liquid leakage. Many non-metals are flammable in cold gaseous oxygen or in liquid oxygen even at low temperature and low pressure and concentrations greater than 23.5%. The main factors affecting their ignition and fire propagation are the pressure, temperature and oxygen concentration.

In a kindling chain the non-metallic component is often the link that promotes the ignition of the metallic material just adjacent and in intimate contact with it. Therefore the heat of combustion of the non-metal component and its mass are important parameters to consider.

The suitability of any non-metallic material shall be evaluated for the full design temperature and pressure ranges.

Precautions shall be taken to avoid contamination during the manufacturing process of non-metallic materials. Contamination can be introduced from high pressure hydraulic systems or other machining processes. The use of non-approved additives in the manufacturing process is not permitted. Changes in additives used during the manufacturing process shall comply with Section 13.

The following describes the selection process for the non-metals. This is the first step as the non-metals are the first part of a possible kindling chain.

The following steps shall be considered and confirmed by the valve manufacturer for valves containing non-metallic materials:

- minimize the quantity of non-metals used;
- evaluate possible ignition with kindling chain and take account of heat dissipation in the design by embedding the non-metallic part in an adequate mass of burn resistant metal where necessary, which will act as a heat sink;
- avoid locating non-metals directly in the gaseous or liquid oxygen stream, where possible; and
- prevent excessive friction or mechanical impact of the non-metallic component.

There is no defined pressure threshold where non-metallic components are no longer allowed, but the higher the pressure is, the more caution is required for the use of non-metallic materials. Data for mechanical impact tests are only published for liquid oxygen at ambient pressure. In case of high pressure applications additional test data could be required.

The consistency of composition of non-metallic components can vary especially for plastics, elastomers and compound material.

The selection of non-metallic materials for valves requires two steps. First, verify the mechanical and chemical suitability, flexibility, etc., (other than oxygen compatibility) of selected non-metallic material based on design and operating conditions (including transient conditions). Second determine the ignitability and burn resistance of the material in cold oxygen. This can include auto ignition temperature (AIT), mechanical impact test in liquid oxygen, minimum pressure leading to ignition by adiabatic compression if the non-metallic material can be exposed to adiabatic compression and energy released when burning (heat of combustion).

In practice it is usual to consider a minimum auto ignition temperature (AIT) of 300°C and to require a margin of at least 100°C between the AIT and the maximum operating temperature that can be anticipated (for example during cooldown). However, a lower margin of 50°C may be accepted subject to additional tests.

For valves operating in liquid oxygen service, the non-metallic material shall pass a mechanical impact test in liquid oxygen. For more information concerning test methods and list of non-metallic materials,

refer to ASTM G63, ASTM G72, *Standard Test Method for Autogenous Ignition Temperature of Liquids and Solids in a High-Pressure Oxygen-Enriched Environment*, ASTM G86, *Standard Test Method for Determining Ignition Sensitivity of Materials to Mechanical Impact in Ambient Liquid Oxygen and Pressurized Liquid and Gaseous Oxygen Environments*, ASTM D2512, *Standard Test Method for Compatibility of Materials with Liquid Oxygen (Impact Sensitivity Threshold and Pass-Fail Techniques)* and EN 1797, *Cryogenic vessels, Gas/material compatibility* [1, 6, 7, 8, 9]. The test and appropriate test report shall be carried out by a referenced laboratory² according to International Organization for Standardization (ISO), Federal Institute for Materials Research and Testing (BAM), or ASTM standards. Existing and valid test reports can be used if the type and origin of the non-metallic material have been verified. Special consideration shall be given if only the base material has been tested and not the final product configuration (for example braided packing). Although a base material could have been successfully tested, it might not pass the test when fabricated into the final product configuration.

6.4 Specific requirements for lubricants and locking compounds

All valve components which are subjected to cold oxygen (i.e., wetted or in the flow path) shall be designed to function without lubrication between moving parts. Valve components that are exposed to oxygen (for example, seat, stem and plug) should be designed for assembly and workshop testing without any lubrication being required. In specific cases where lubricants and locking compounds are required for assembly, their use and type shall be approved by the valve specifier and the amount shall be minimized. Removal of lubricants after assembling may not be possible. The type and location of lubricant and locking compounds used shall be indicated on the valve drawing.

Oil lubricants are very difficult to contain because of their low viscosity. They can migrate along the stem of a valve through valve packing, tight clearances, and through seals including valve stem extensions for cryogenic service. Lubricants and greases suitable for oxygen service are generally halogenated chlorotrifluoroethylene (CTFE) and perfluoropolyether (PFPE) fluids, which are thickened with silicon oxide or polytetrafluoroethylene (PTFE). Many oxygen-compatible lubricants are hydrophilic and provide no corrosion protection as compared to hydrocarbon based lubricants. Experience and testing have demonstrated that oxygen compatible greases do not provide the same level of lubrication as hydrocarbon based greases. Many failures have occurred due to corrosion caused by the atmospheric moisture. It should be noted that in cryogenic conditions lubricants are likely to freeze and cement valve parts together.

A lubricant or locking compound is considered as compatible for use for valves, if the following conditions are met:

- AIT greater than or equal to 400 °C at the maximum operating pressure in gaseous oxygen or at 120 bar in case the maximum operating pressure is lower than 120 bar; and
- the lubricants passed the mechanical impact test in liquid oxygen at ambient pressure, as determined by an acceptable test method, for example, by ASTM G86 or ASTM D2512 [7,8].

If available, liquid oxygen impact test data under design pressure conditions should be considered according to ASTM G86 [7].

NOTE. Even minor contamination (for example, hydrocarbons, dust, metal particles or chips) of an oxygen compatible lubricant can significantly reduce the ignition resistance of the lubricant. For more information see the BAM test reports published in "List of non-metallic materials M034-1" [10].

Gearboxes typically have hydrocarbon grease as the lubricant. Design features shall ensure that oxygen leakage cannot come into contact with hydrocarbon lubricants and that hydrocarbon lubricants cannot migrate into the oxygen wetted area (for example, from gearbox or threads of bolts of valve flanges). When this cannot be ensured, tested oxygen compatible lubricants shall be used.

² Examples include CTE (Air Liquide Blanc-Mesnil, France), BAM (Berlin, Germany) and Wendell Hull Associates (Las Cruces, NM, USA)

Assessment of lubrication migration from the gearbox is especially important for valve design (for example, globe and gate valves) where part of the stem is exposed to the internal oxygen when closed and external environment when open. The motion of the stem during operation increases the risk of external contamination such as hydrocarbon greases to be transported through the packing of the valve over multiple operations, see 7.2.7.3 and 7.2.7.4.

The risk of this type of migration shall be considered based on maximum environmental temperatures that could decrease the viscosity of the grease and increase the probability of migration along the valve stem.

7 Design philosophy

7.1 General system design

The safe design and operation of a cold oxygen system depends on various factors that can influence each other. This section describes the principal hazards associated with cold oxygen systems and the manner in which these hazards can be minimized by good design practices.

An oxygen hazard analysis of valves as described in 4.3 shall be followed for given valve operating range and model. Results of such an analysis shall be documented and re-assessed if the operating range or valve model changes. This analysis can be reflected in company standards and procedures. All the design principles described assume sufficient cleanliness as described in Section 8.

The design of all parts shall allow for an approved cleaning process, see Section 8.

7.2 Valve design

7.2.1 General

Valves shall be manufactured by organisations that have been qualified for the specified oxygen valve applications, see 13.1.2. Materials of construction and the physical design of the valve shall be selected considering all the normal, maximum and upset operating conditions as well as start-up and shutdown conditions to which the valve can be subjected.

The valve specifier shall provide specifications and perform a design review. The valve manufacturer shall provide the design documentation (for example, drawings, bill of materials, etc.) to accomplish the review. Components within the flow stream shall meet the following requirements.

If the valve has an integral metallic seat, any hard facing coatings shall be in accordance with 7.2.8. All parts of the valve shall be designed to allow disassembly for oxygen cleaning.

Anti-static features to limit static electricity accumulation as well as electrical continuity through the valve shall be integrated into the design.

The valve should be designed with stem extension, where necessary, so the gland packing remains at ambient temperature while in operation to prevent oxygen leakage. To allow for good insulation the radial clearance between valve stem and extension tube shall be minimized.

The assembly of the valve stem into the bonnet and bonnet extension can scratch the surface finish of the valve stem. Scratches on the valve stem can influence sealing ability and can increase the risk of contaminant migration, especially for rising stems for example, gate and globe valves. The internal shoulders of the bonnet, bonnet extension, packing gland, etc. shall avoid sharp edges and be deburred to reduce the risk of stem scratching.

Testing (for example, long term cycle testing, leak testing, etc.) may be specified for new valves/designs that have not been previously qualified in liquid cryogenic service. Test procedures shall be agreed upon between the specifier and the manufacturer.

Stem bearings (radial/axial) that are exposed to the flow stream or wetted shall meet the mechanical wear resistance requirements of the valve design to reduce ignition potential caused by mechanical overstressing or friction from parts physically rubbing or galling.

Internal metallic components can contribute to kindling and act as a fuel; so specific characteristics, such as burn resistance and heat of combustion of the metallic materials are key factors. There are two basic approaches that can be used in tandem to help reduce the risk of an ignition/combustion event inside a valve.

- Minimize the energy available to promote and kindle non-metal-to-metal and direct metal ignition-combustion. This includes cleaning, minimum use of non-metal, using best evaluated non-metallic materials in terms of oxygen index, AIT, heat of combustion electrical continuity, internal metallic components selection regarding minimum thickness and avoiding thin sections on pressure containing parts; or
- Maximize the energy threshold needed for ignition combustion of internal metallic components and pressure containing parts (valve body). In practice, this involves the use of metallic components whose chemistry and geometry (surface area to mass) are considered burn resistant for specific service conditions (oxygen concentration, pressure and temperature).

Work processes are needed for each of the following:

- material specification and design features for non-metallic components internal metallic components and valve body; and
- oxygen cleanliness during manufacturing, assembly transportation, installation and maintenance.

7.2.2 Isolation valves

Isolation valves are designed to operate in either fully closed or fully open position but never in a throttling mode. If the operating pressure is above 3 bar, they shall only be operated with a differential pressure at or below 0.3 bar unless designed for throttling service or an oxygen hazard analysis and risk assessment is carried out.

In cold oxygen service, isolation valves opened with a high differential pressure across the seat, particularly during the system cooldown and start up, can experience:

- high velocity and turbulence through the valve during its opening, possibly resulting in cavitation or two phase condition;
- frictional heating and/or mechanical impact of internal components due to severe vibration; or
- rapid downstream pressurization and possible temperature rise due to adiabatic compression.

These hazards can be minimized by the use of:

- a bypass system ,see 7.2.3; or
- specific operating procedure to equalize pressure across the isolation valve before it is opened as well as for the system cooldown, or
- an isolation valve that is designed using the criteria for throttling valves.

Valve tightness is applicable in one direction only. The installation direction should be indicated on the valve body, process and instrument diagrams (P&ID) and/or piping assembly drawings. The leak tightness of the valve shall be type tested at cryogenic temperatures.

7.2.3 Bypass systems for pressure equalization

For cold oxygen systems operating above 3 bar, a bypass system shall be installed for each isolation valve unless the isolation valve is designed for throttling service or operating procedures can be used to equalize (within 0.3 bar) pressure across the isolation valve before opening. A bypass system is normally piped from immediately upstream to immediately downstream of an isolation valve. A bypass system is used to slowly pressurize upstream or downstream piping system to mitigate risks associated with the excessive mechanical loading on the isolation valve, high fluid velocity and rapid pressurization.

A bypass system shall be designed according to the following criteria:

- throttling valve, (for example, a globe valve is used as bypass valve to achieve controlled pressurization);
- bypass valve is sized to allow pressure equalisation within an acceptable time period;
- the bypass line is connected into the main pipe at or above the centreline;
- the bypass valve is installed at a high point to avoid dry boiling (see Figure 3), and
- the bypass line materials of construction are burn resistant or selected based on an oxygen hazard analysis and risk assessment.

In addition the bypass system should be designed so that vibrations are minimised as flow induced vibration can be a source of ignition.

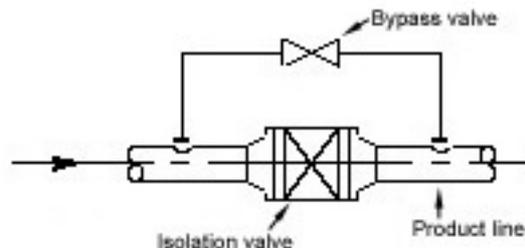


Figure 3 Example for a bypass system

7.2.4 Throttling valves

Valves that do not operate as isolation valves shall be treated as throttling valves.

Throttling valves shall follow the burn resistance method for material selection (Section 6), as these can be subject to high differential pressures and high velocities resulting in a higher risk potential for ignition.

Throttling valves can be automated or manually operated and include those used for pressure control, flow control and bypass valves. These normally include globe, eccentric plug butterfly, modified ball valves and spring operated regulators.

In ASUs the majority of process control valves are automated. The exceptions are manually operated throttling valves and spring-operated regulators.

Other examples of throttling valves include vent valves, bleed valves, pressure relief valves, drain valves and other valves operated under high differential pressures.

7.2.5 Emergency shut-off valves

Emergency shut-off valves are usually automated, operate in the fully open position, and are normally closed only in the event of an emergency. The valve can experience momentary high velocities, high mechanical load and turbulence during closing. Emergency shut-off valves shall be treated as throttling valves and are normally of butterfly, globe, or ball type.

7.2.6 Vent and drain valves

Vent and drain valves can experience high velocity and impingement and are usually treated as throttling valves. Because these valves can operate in warm gaseous oxygen or cold oxygen an oxygen hazard analysis and risk assessment shall be performed to determine if the valves should be designed as part of a warm gaseous oxygen system, see AIGA 021, *Oxygen Pipeline and Oxygen Piping Systems* or follow this publication's material selection method [3]. The basis for the oxygen hazard analysis and risk assessment shall be the potential operation under full design pressure of the system.

7.2.7 Valve types

7.2.7.1 Ball valves

When fully open ball valves, operate with the ball out of the flow stream.

When this valve is partly open, thin edges of the ball are exposed to the flow stream. See Figures 1 and 2 for material selection.

Ball valves are inherently quick opening which leads to concerns about adiabatic compression and temperature rise, especially for any elastomers downstream in the piping system. Ball valves may be equipped with gear operators to ensure slow opening.

In addition, ball valves shall be designed with internal pressure relieving features to avoid pressure build up from liquid or cold gaseous oxygen trapped in the ball cavity. Bi-directional isolation design shall not be specified since it compromises the internal pressure relieving feature.

7.2.7.2 Butterfly valves

When open, butterfly valves operate with the valve disk in the flow stream.

In case of reverse flow, the seat groove can become a thin part in the flow stream area and needs to follow the described burn resistance method. See Figure 2 for selection and design of internal metallic parts.

The shaft to bonnet or shaft to body bearing/bushing should be a metallic design and shall be designed to meet the mechanical requirements at maximum pressure differential across the valve disc.

Butterfly valves are inherently quick opening which leads to concerns about adiabatic compression and temperature rise, especially for any elastomers downstream in the piping system. Butterfly valves may be equipped with gear operators to ensure slow opening.

7.2.7.3 Gate valves

Gate valves shall not be used as throttling valves for cold oxygen applications. An internal pressure relieving feature shall be provided if necessary to avoid pressure build up from liquid trapped between the wedge and the body.

Pressure equalization shall be established between the inlet and outlet of a process gate valve prior to opening.

The shaft to bonnet bearing/bushing should be a metallic design and shall be designed to meet the mechanical requirements at maximum pressure differential across the valve wedge.

Gate valves shall be metallic seated with a soft or metallic seal according to application and tightness requirements. The integral metal seat and seal (if any) material shall meet the specific metallic material selection criteria.

Gate valves designed with part of the stem wetted by oxygen when closed and exposed to the external environment when open should be reviewed for risk of external contaminant migration through the stem seals, (for example, packing).

7.2.7.4 Globe valves

Globe valves are commonly used in cold oxygen on-off (open-closed) or throttling applications and can be manual or automated. The trim design varies with specific valve manufacturers but it can have a relatively thin section fitted with non-metallic inserts to minimize leakage. Sometimes, for high differential pressures, cage trims are used, which are usually of thin section and provide sites for debris to be trapped and create friction. In this case, the trim of the globe valve shall be designed for a higher burn resistance.

Globe valves designed with part of the stem wetted by oxygen when closed and exposed to the external environment when open should be reviewed for risk of external contaminant migration through the stem seals for example, packing.

7.2.7.5 Pressure relief valves

Pressure relief valves in cold oxygen service will experience warm gaseous relief during initial opening and high velocities across the trim. There will be impingement on the exhaust part of the housing and outlet piping although these areas are normally at or close to atmospheric pressure. The sizing of the trim and the valve inlet determines the gas velocity at the valve inlet. Specific metallic material selection as described in Section 6 can be used for both nozzle and poppet trim which are considered impingement sites unless other mitigating measures are in place. Ignition can also occur due to mechanical issues such as chattering.

If particles are present there will be impingement on the exhaust part of the housing and outlet piping. When performing an oxygen hazard analysis and risk assessment on pressure relief valves the potential for contamination or plugging of the exhaust vent shall be considered. In case of the latter, the pressure in the exhaust pipe can exceed 10% of the set pressure.

For pilot operated pressure relief valves, the pilot valve will be exposed to oxygen and shall be designed accordingly.

7.2.7.6 Check valves

Check valves contain components that are always in the flow stream and can be subjected to mechanical impact. The material selection of the disk, plate, piston, hinge or spring of a check valve shall be evaluated according to the material selection process in Section 6. The components of check valves are designed to impact with each other and shall be considered as potential sources of ignition energy.

The internals of the valve should avoid using small components. Check valves should be designed and installed to minimize chatter.

7.2.8 Hard facings and burn resistant coatings

Facings such as overlay welding with hardening and/or burn resistant metallic material coating are acceptable.

The material of overlay welding, metallic coating and the final metallurgical bonding shall meet the expected operating conditions. The minimum thickness of overlay welding and/or metallic coating shall be agreed between the valve manufacturer and valve specifier.

7.2.9 Actuators and gearboxes

The valve manufacturer shall specify the type and location of the lubricant used for external equipment requiring lubrication, such as gear operator or hand lever. The actuators and gearbox shall be designed to prevent lubricant leakage and subsequent migration to the process. For example, this can be done, by providing a sealed gearbox and a distance piece open to the atmosphere. If the stem is mounted vertically or at an angle towards the valve, ensure that a device such as a deflector plate is used to prevent leakage down the stem into the packing area.

In rare cases, oxygen can be used as an instrument gas supply. These systems have specific design requirements due to the presence of oxygen. The instrumentation materials such as volume booster or quick exhaust and actuator materials shall follow the oxygen material selection guide lines defined by AIGA 021 [3].

8 Valve cleaning for oxygen service

In addition to good design and material selection for the valves used in cold oxygen service, organic and inorganic contaminants including oils, greases, thread lubricants, fibre, rust, dirt, filings, and other foreign material shall be removed from the valves and the associated piping. This is in order to reduce risks of ignition and combustion propagation. Refer to CGA G-4.1, *Cleaning equipment for oxygen service*] and AIGA 012, *Cleaning of equipment for oxygen service* for guidance on oxygen service cleaning [11,12].

8.1 Valve cleaning strategy

New valves shall be specified and purchased from the manufacturer cleaned for oxygen service, or sent to a third party vendor approved by the valve specifier to provide oxygen service cleaning. The requirement to clean for oxygen service shall appear on all purchase orders for the valves. The manufacturer's or third party vendor's cleaning procedure, cleaning agent specified and the quality control procedure shall be reviewed and accepted by the valve specifier. The valve specifier shall initially and periodically inspect the manufacturer's/third party vendor's facilities and audit the cleaning and quality control procedures. The cleaning strategy is an essential part of valve manufacturer qualification, see 13.1.2.

The geometry of the valves to be cleaned shall be considered while selecting a cleaning method so that cleaning, rinsing, purging and drying can be planned to ensure that all surfaces are cleaned and any cleaning agent residue is completely removed. The valve manufacturing and machining processes shall be so the required cleanliness can be achieved. Machining chips, burrs, etc. shall be eliminated. In addition to cleaning the normally oxygen wetted surfaces of a valve, other areas of the valve that could come into contact with oxygen in case of damage to the valve internals shall also be cleaned for oxygen service. As it is often difficult to ensure adequate cleaning of inaccessible areas of the valves, individual valve components shall be cleaned before assembly. Care shall be taken to ensure valve parts are not contaminated during assembly.

The use of solvents as cleaning agents is an alternative to aqueous cleaning agents. Some solvents are incompatible with non-metallic parts of the valve such as the valve seat. Some solvents can be absorbed by the non-metallic materials and render a compatible material non compatible and create a flammability hazard. Or properties of the non-metallic parts can also change leading to problems such as valve leaks. These shall be considered when selecting the solvent.

Once cleaning is completed, all cleaning agent residues shall be removed.

If the valves need to be cleaned in the field, for example, after maintenance, the valves shall be cleaned by trained and qualified personnel or by contractors prequalified by the valve specifier for oxygen service cleaning. Care shall be taken on those parts of the valves with hidden cavities or

areas inaccessible for inspection. Precautions described in this section shall be followed during field cleaning of the valves.

The cleaning process shall be qualified as meeting the cleaning requirements for each valve model.

All cleaning inspection and assembly activities until packing shall take place in a designated area for clean work, (see Section 13).

8.2 Cleanliness inspection

Regardless of the cleaning method used, inspection to verify and document cleanliness is required. Cleaned parts and/or valves shall be inspected by qualified personnel. Failure to pass inspection requires re-cleaning and re-inspection. It should be noted that some contaminants do not fluoresce under ultraviolet light and cannot be detected during inspection using ultraviolet light. See CGA G-4.1 and AIGA 012 for guidance on inspection procedures [11, 12].

Verification of cleaning results shall take place according to an agreed inspection procedure.

Re-cleaning activities usually require the disassembly of the valve and can require a return to the manufacturer.

8.3 Standard of cleanliness

A valve is considered to be clean for oxygen service when organic, inorganic and particulate contamination have been removed to the level specified. See CGA G-4.1, AIGA 012, and ASTM G93-*Standard practice for cleaning methods and cleanliness levels for material and equipment used in oxygen-enriched environments*, for guidance on threshold detection limits and cleanliness acceptance criteria [11, 12, 13].

8.4 Packaging, storage and handling

Once a valve or part has been cleaned and inspected, it shall either be used immediately or packaged and labelled to prevent recontamination during storage, transportation and prior to installation and commissioning.

Care shall be taken to ensure that cleaned parts are not re-contaminated during assembly or packaging once they have passed inspection. Tools used for assembly or installation shall be cleaned to prevent them from contaminating the parts. If there is any question regarding cleanliness, inspection of the valve is required and cleaning carried out if necessary.

Parts and/or valves that are not immediately used after cleaning and inspection shall be sealed in new, clean plastic bags or appropriate containers. Individual pieces should be packed in separate bags. Precautions to be taken include:

- new plastic sheeting may be used on valves as necessary in place of separate bags;
- protective covering shall not leave a residue;
- openings on valves shall be sealed with clean caps, plugs or blind flanges
- small valves, parts, gaskets, fittings, etc. shall be packed or bagged in plastic bags and sealed for protection from contamination;
- do not use any adhesives on oxygen valves. The adhesive in waterproof cloth (duct tape) is not oxygen compatible and is difficult to remove; and
- all protective caps, plugs, blinds, and other packaging shall be kept in place until final assembly or installation.

Packaged parts cleaned for oxygen service shall be labelled as “CLEANED FOR OXYGEN SERVICE” and should indicate the number of desiccant bags, if any, that have been put inside the packaging. The number of desiccant bags indicated on the label shall be removed before installation of the valve or part.

Valves or parts in damaged or opened packages or having illegible labels shall be re-inspected and cleaned if necessary.

Oxygen service cleaned valves and parts shall be stored in an area designated for oxygen service cleaned parts. These shall be segregated from valves and parts that have not been cleaned for oxygen service.

8.5 Records

Records of oxygen service cleaning inspections shall be supplied to the valve specifier by the valve manufacturer or the third party cleaning vendor. When a valve is cleaned in the field, the organisation responsible for cleaning shall prepare and maintain the inspection records. See CGA G-4.1, and AIGA 012 for guidance on record keeping [11, 12].

Cleanliness inspection records shall be part of the plant documentation.

9 Site installation

Cold oxygen piping and piping components shall be cleaned for oxygen service before installation and cleanliness shall be maintained thereafter. If any contamination occurs during installation, re-cleaning and inspection are required. Care shall be taken that all traces of the cleaning agent have been removed from the system as the cleaning agent could have accumulated at low points and dead ends. Piping system installation shall be carried out by contractors approved in their particular discipline for example, mechanical, civil, instrumentation in accordance with the design drawings and specifications. Procedures in accordance with the work instructions of the manufacturer shall be made available to technicians and supervisors.

Valves cleaned for oxygen service shall be installed in the clean piping system. Blowing out of the system can occur after the valves are installed. The geometry of the valves shall be reviewed to ensure that particles remaining in the piping cannot accumulate in cavities inside the valve during the blowing operation. For example, valves with cages can trap the particles being blown out. Such valves should be installed only after completing the blowing operation or re-cleaned after completing the blowing operation. Alternatively, valve internal components can be removed during the blowing operation provided oxygen cleanliness is maintained and verified before their re-installation.

Valves shall be installed in the correct direction. Directional arrow markings are typically present on the valve body or stem. It is not always obvious to the valve installer(s) whether the arrow indicates the direction of normal flow or the direction of pressure against which the valve shall seal when in closed position. This can be opposite of the normal flow direction. The directional arrows shall be interpreted by the construction supervisor(s) for example, from piping isometrics, or process and instrument diagrams. This information shall be provided to the installer(s).

Cold oxygen valves shall be installed with the stem having at least a minimum slope of 15° upwards from the horizontal with the valve body at the lowest point. The valves shall not be installed with the stem in the horizontal orientation to prevent accumulation of hydrocarbons in the valve due to dry boiling of liquid oxygen.

The following shall be considered for site installation of valves:

- Ensure that the specified valve has been delivered by checking purchasing documents;
- Check that the packaging is intact;
- Oxygen equipment is segregated and packaging integrity is maintained during storage;

- Supervised handling of the valves is only by personnel trained for oxygen equipment installation to avoid issues such as early unpacking, recontamination by greasy fingers, dust, mechanical damage during installation etc.;
- Before installation, qualified personnel shall inspect the valves at both the inlet and outlet ends and at all accessible points to verify the cleanliness of the oxygen wetted surfaces;
- Correct torque and bolting protocols for all bolting of valves, piping and accessories;
- Gaskets - cleanliness, storage, types for different pressure applications;
- As preparation for welding or brazing heat sensitive parts such as soft seats or bonnet assembly should be removed when close to the heat source;
- Quality check procedure for correct reassembly, especially alignment of gearbox or actuator;
- Process of site construction/site machining - cleanliness and all standards are kept
- Cleaning before commissioning - blowing out procedures, avoid contamination from the piping system; and
- Small valves, for example pressure relief valves for thermal expansion, are sometimes fitted to the process line using a threaded connection. It shall be confirmed that the thread sealant material is compatible for oxygen service at the maximum service pressure and temperature. Minimal amounts of thread sealant shall be applied to prevent extrusion of the sealing material into the process. For accepted thread sealant materials see 11.3.5.

10 Operations

10.1 Personnel

In addition to being trained in work safety knowledge, personnel who operate and maintain oxygen systems shall also have specific training and understanding of oxygen safety requirements, see Section 12.

All the relevant operating and safety procedures shall be available to operations personnel. Subcontractor's personnel shall be informed about, and have access to all the relevant safety information.

Operations and maintenance personnel shall work with clean hands, clothing and gloves.

10.2 Isolation, drain and vent valves

Operational personnel shall receive instructions about the use of isolation drain and vent valves to exclude inappropriate use, for example, overloading liquid disposal systems and venting and high pressure liquid.

Isolation, drain or vent valves that are not designed to be opened with high differential pressures in oxygen service that could be opened by mistake shall be labelled with a warning sign prohibiting opening under high pressure. A lockout/tagout (LOTO) process should be in place for these valves.

10.3 Pressure relief valves

An operating procedure shall be in place that gives guidance to the operator for the following phenomena of pressure relief valves in liquid oxygen systems:

- chattering/vibration;
- icing up; and

- leakage.

10.4 Pressurizing piping systems

Operating procedures shall be in place to avoid unacceptable temperature increase due to adiabatic compression, see Section 5. Provisions shall be made for determining the pressure difference across isolation valves regardless whether locally or remotely controlled.

10.5 Valve leaks

An operator site walk should include checks for any leaking valves. See Section 11 for safety precautions to be taken when dealing with leaks.

External leaks from liquid oxygen valves (seals or outlet piping) should be stopped as soon as possible to prevent damage to the surrounding equipment and surfaces by cryogenic fluids and possible oxygen enrichment hazards in the immediate surroundings.

An internally leaking (passing) valve can also result in hydrocarbon accumulation due to continuous dry boiling within the valve or piping. This accumulation can lead to violent energy release and corrective action should be undertaken to resolve this situation, see Section 5. This also applies to a non-leaking dead end liquid oxygen valve that has lost its gas seal which normally results in icing up of the dead end valve. Periodic purging is required to prevent hydrocarbon accumulation.

Liquid oxygen leaking at the packing of valves is a common cause of ice build-up that should be avoided on valves in cryogenic service because it will impede valve operation and can stop the valve from fully opening or closing. A liquid oxygen leak at the packing of a valve can lead to oxygen enrichment in the environment.

Maintenance may be required for oxygen valves when there is:

- evidence of process media leaking through the packing and/or bonnet gasket;
- evidence of lubricants leaking from the gearbox or actuator along the shaft (packing) and/or
- icing up of valves due to passing through the seat or leaking through packing or gasket.

10.6 Shutdown and startup of piping systems

Written procedures are required for shutdown/startup and maintenance of piping systems. The personnel involved in this work, including contractors, shall be informed of the specific risks related to oxygen and the tasks to be performed.

Authorization by a responsible person shall be given:

- prior to starting maintenance work and after shut-off procedures are completed; and
- prior to re-pressurizing, cooling down the pipe, when maintenance work is completed and cleanliness for oxygen service has been verified.

No repair work shall be carried out on equipment and plant until a permit to work has been authorized. See AIGA 011, *Work permit systems* [14]

11 Maintenance

11.1 General considerations

Personnel who operate and maintain oxygen systems shall be trained and understand oxygen safety requirements, see Section 12. They shall be familiar with the hazards and safeguards of the system they are maintaining. The valve manufacturer's and/or owner's maintenance procedures shall be

available to maintenance personnel. Contractor personnel shall be informed about, and have access to all the relevant safety information.

Maintenance personnel shall work with clean hands, work clothing, and gloves that are free of lint, fibres, and uncontaminated by oil or grease. Oxygen wetted parts shall not be touched with bare hands. Personal protective equipment (PPE) requirements are given in AIGA 066, *Selection of personnel protective equipment* [15].

Before performing work on oxygen systems, a safety work permit should be issued. Guidance on work permit systems can be found in publications such as AIGA 011 [14]:

Examples of precautions to be taken include:

- open flames shall be prohibited in the safety zone;
- hot work shall only be performed under written work permission;
- ensure that all traces of oil and grease are removed;
- cap open pipes ends when not working on the pipe; and
- grounding of any equipment, such as welding equipment, onto oxygen piping systems while in operation (oxygen under pressure), is not permitted.

11.1.1 Equipment isolation

Lockout/tagout procedures shall be used with positive isolation as necessary when maintenance is undertaken on the oxygen system itself.

11.1.2 Management of change

A management of change (MOC) process shall be followed for any changes made, other than replacement in kind, to the piping system, gaskets, control system, valve internal parts, etc. See AIGA 010, *Management of change* for guidance [16].

An MOC process shall also be followed for any changes in inspection, maintenance or cleaning procedures.

11.1.3 Work on oxygen systems, handling leakage

The decision to repair any leakage while the system is in operation shall be based on a risk assessment. If the leak is liquid, a cryogenic hazard is present, and this shall be included in the risk assessment. Leakage most commonly occurs at flanges and valve glands. These may be addressed as follows:

- Flanges
 - If flange bolts are not excessively frosted, it can be possible to manually re-torque bolts (see 11.3.4 on cold torquing). Only use hand tools.
- Valve glands
 - If gland nuts can be safely accessed, tightening of the valve gland is possible.

Exposing personnel to an oxygen rich atmosphere that will saturate their clothing and hair with oxygen can present a hazard if there is any source of ignition. Any person that is inadvertently exposed, or who considers that it is possible that some oxygen could have migrated into clothing or hair should leave the area and avoid all sources of ignition until the oxygen dissipates, see AIGA 005, *Fire Hazards of Oxygen and Oxygen Enriched Atmosphere* [2].

11.1.4 Protecting open systems when valves have been removed

Open pipes or ports shall be protected with oxygen cleaned plugs, caps or blinds. These should be controlled as listed items on a register so that they can all be accounted for when work is complete.

Rags and adhesive tape shall not be used inside pipe work or on flange faces. Protected piping should have a nitrogen or dry, oil-free air purge applied to ensure that debris cannot enter the piping and to prevent condensation. Care shall be taken when using purges in closed areas or in confined spaces such as valve boxes and coldboxes. Assume that purge gas will enter that space and label it and barrier it accordingly against inadvertent entry by personnel. Asphyxiation hazards shall be managed by an appropriate work permit process, see AIGA 008, *Hazards of inert gases and oxygen depletion* and CGA SB-2 *Oxygen-Deficient Atmospheres* [17 18].

11.1.5 Tools and workshop facilities

All tools used on oxygen valves shall be clean and free of grease.

A separate clean area shall be allocated for servicing oxygen equipment. No machining, welding or other maintenance work not requiring oxygen cleanliness shall be carried out in this area while maintenance is being carried out on oxygen equipment. Benches, tools and vices used in this clean area shall be cleaned and hydrocarbon free. Care should be taken when using lifting tools that could have been contaminated when used for other activities. Work surfaces should be covered with clean, lint free cloth. The area is also likely to include a variety of equipment for oxygen cleaning, including solvent or detergent baths. These shall have appropriate fume extraction equipment.

If a functional or tightness test is needed it shall be carried out using clean, dry and oil-free air or nitrogen.

Clean clothing shall be worn when performing work on oxygen systems.

For further details see CGA G4.1 and AIGA 012, *Cleaning of Equipment for Oxygen Service* [11, 12].

11.1.6 Quality control

Prior to the start of maintenance the company or contractor shall submit a quality plan with hold and witness inspection points for approval by a qualified person. As a minimum, the company or contractor shall notify the qualified person prior to the following hold/witness points:

- confirm that all replacement parts meet the oxygen valve specifications;
- all parts are free of burrs, sharp edges, mechanical damage;
- inspection for oxygen cleanliness (see 8.2); and
- inspection and acceptance records shall be kept for the cleaned equipment (including piping) or assembly.

For further details of cleanliness inspection see CGA G-4.1 and AIGA 012 [11, 12].

11.2 Maintenance strategy of valves

In principle the maintenance strategy for cold oxygen valves is no different from other valves in ASU service.

Repair procedures shall be available and repair workshops shall be assessed and have their facilities qualified based on their ability to perform oxygen work and technician skills and knowledge.

11.3 Assembly and installation

11.3.1 Ensuring correct direction for valve re-installation

The direction arrow on a valve should always be noted upon removal. It is essential to re-install the valve in the same orientation.

11.3.2 Alignment

Before bolting up the valve, the alignment deviation of the flange face and flange bolt holes shall not exceed the values defined in the project specification. All bolts shall pass easily through both flanges. The tolerance on the termination of all piping other than flanged connections shall be as shown in the design drawings and specifications.

Overstress in the valve body shall be avoided as it can cause leaking or friction and can lead to a potentially hazardous situation.

11.3.3 Gaskets

Gaskets shall be installed in accordance with the design drawings. The use of gasket types or materials other than those defined in the project specification shall be prohibited unless approved by a person competent to assess the oxygen compatibility of the proposed material for the service conditions. Changes to the gasket specification shall undergo a MOC process (see 11.1.2). Gaskets should only be removed from packaging immediately prior to use. If the package is found open and contamination is suspected, the gaskets shall either be re-cleaned for oxygen service or rejected.

Gaskets shall be correctly sized and centred to ensure that no part of the gasket protrudes beyond the inner wall of the pipe into the flow stream. The use of gasket sealants shall be avoided to prevent extrusion of the sealant material into the pipeline system. The reuse of any gasket is prohibited.

Gaskets for oxygen systems should not be hand cut from sheet because they are difficult to clean and can have ragged edges which could protrude into the flow stream.

Care shall be taken when cleaning the flange surface to ensure that any debris created does not enter the pipework.

Gaskets, nuts, and bolts shall be visually inspected to ensure that they are clean and in good condition. Teflon based coated bolts are ideal for obtaining the required torque for tightness. A lubricant as defined in the project specification may be applied to bolt, threads and bearing faces of nuts and washers before bolts are inserted into flanges and tightened.

11.3.4 Cold torquing of cryogenic valve flanges

It is sometimes necessary to re-tighten flange studs after first cool-down when valves are re-installed after maintenance. For this reason valves that are installed in perlited or rock-wool boxes or within external pipe insulation should not be re-insulated until after a cold test of the system. Valves should be checked for leakage before insulating.

11.3.5 Thread sealant including tape

Hydrocarbon contaminated PTFE tape or sealant is a potential root cause for incidents.

Only pure virgin PTFE tape or sealant is permitted. PTFE tape ordered to either of the following standards or equivalent have low residual lubricant content and are acceptable for liquid oxygen or gaseous oxygen service.

- BS 7786, *Specification for unsintered PTFE tapes for general use* [19]
- A-A-58092 *Commercial Item Description (CID), Tape Antisieze, PTFE* [20]

Thread tape should be used sparingly where required, no excess tape protruding into the process is allowed.

Thread sealant should be applied uniformly to cover the threads needed and no excessive amount of sealant is allowed.

11.3.6 Lubricants

Any lubricants used shall be in compliance with the requirements in 6.4.

11.3.7 Actuator and gearbox maintenance

The use of hydrocarbon greases in actuator and gearbox mechanisms is only permitted where originally specified by the actuator or gearbox manufacturer. Ensure that safeguards remain in place to prevent any grease from migrating along the valve stem.

11.3.8 Valve handling

All valves shall be uniquely identified by identification tags, plates or other similar permanent marking. This identification shall be durable and remain attached to each valve during maintenance. It is not permitted to interchange valves unless approved through an MOC process.

All valves shall be assembled, disassembled and installed in accordance with the piping design drawings. All valves shall be handled in a way that maintains their cleanliness and prevents ingress of moisture, oil, dust and other contaminants. It is essential to maintain bagged or blinded conditions until the moment of re-installation in the field.

Valves in oxygen service removed from piping during maintenance shall be segregated from valves in other service.

11.4 Spares

11.4.1 Source of spares

Spares produced by the original valve manufacturer are strongly preferred (original equipment manufacturer, (OEM)). Where OEM parts are not available, all materials and especially soft goods shall be an exact replacement for the original unless approved through the MOC process. The modified parts or materials or any change in source of the parts, shall be reviewed and approved by a person competent to assess oxygen compatibility.

CAUTION. Some facilities have near identical valves which are not in oxygen service but the internal components including non-metals could differ.

Incorrect selection of spare parts between non-oxygen valve spare parts and oxygen valve spare parts is a potential root cause of incidents. Fires have occurred due to confusion in selection and use of spare parts. Spare parts approved for oxygen service shall be segregated from the non-oxygen service parts. Do not swap parts between non-oxygen service valves and oxygen service valves.

11.4.2 Ordering, packaging and marking

Orders for materials for oxygen service should not be combined with those for other materials. If there is concern and/or uncertainty about their cleanliness, the materials shall be inspected and cleaned according to specified procedures. The materials should be delivered free from rust, scale, oil and grease. See 8.4 for more details and information on packaging.

A component that is cleaned for oxygen service shall only be used at the service conditions for which it was ordered. Using it in different service conditions without a MOC process is not permitted as the part could be incompatible with the original valve. Approval from a company expert shall be obtained before using it in a different service condition.

11.4.3 Spare gaskets

Gaskets shall be stored and bagged with other oxygen components and only opened in the field when needed at the moment of installation, see 11.3.3.

11.4.4 Labelling

All packaging for spare parts used in oxygen service shall have a label indicating 'CLEANED FOR OXYGEN SERVICE', see also 8.4.

11.4.5 Adequacy of preservation

Periodic warehouse checks of stored valves and or spare parts are recommended. The packaging shall be intact and the oxygen service labelling shall be present. If packaging is damaged or labelling is missing then re-cleaning or replacement is required.

11.5 Supervision and inspection

For the supervision and inspection of the maintenance activity the following is required:

- qualified supervision to approve contractor workshops, capabilities, methods and cleanliness procedures;
- cleanliness inspection of valves being maintained; and
- supervision of installation of valve to ensure compliance with requirements, see 11.1.

11.6 Documentation

For quality documentation measures for valves and spare parts, see Section 13.

11.7 System restart after maintenance

11.7.1 System blowout after major maintenance

Cleanliness can be divided into two distinct areas,

- free from hydrocarbons; and
- free of particulates.

Hydrocarbon cleanliness can only be achieved by rigorous attention to component, valve and system build cleanliness as the maintenance is performed as previously described. Similar attention should be given to particulate cleanliness. However here it is important to be realistic. When working in the field, cleaning gasket faces or final installation of a valve between flanges, particulate can fall into piping, particularly when vertically orientated. Particulates are not always visible and not easily removed. Accordingly it is recommended that any oxygen system that has been opened for maintenance is blown out with inert gas or clean, oil free, dry air or nitrogen wherever possible. This is the only real proof test for particulate cleanliness in many real life situations.

11.7.2 Excluding personnel from the area of startup of equipment

Personnel should be excluded from the start up area of equipment as far as practical when re-commissioning systems that have been opened and/or subjected to maintenance.

12 Training

All personnel working with oxygen systems shall be trained in oxygen system safety hazards. These personnel can include operations and maintenance personnel, engineering procurement construction,

contractors, commissioning and start up, contracting and procurement, warehousing staff, inspection staff, valve manufacturers/suppliers and design organisations.

12.1 Training scope and elements of the training programme

The following training topics shall be applied to personnel involved in oxygen systems according to job function.

12.1.1 Potential hazards

Potential hazards and safeguards related to liquid and gaseous oxygen should be included in the training. It is recommended to present examples about incidents.

Site operational procedures (SOPs) relating to oxygen valves and all the relevant operating and safety procedures shall be available to operations personnel.

12.1.2 Cleaning and cleanliness for oxygen service

Training for cleaning and cleanliness for oxygen service shall be developed according to CGA, 4.1 and AIGA 012, [11, 12]. Tools and clothing shall be clean for working on oxygen equipment.

12.1.3 Oxygen compatibility of materials

Personnel shall be instructed that only approved materials (spare parts, supplies, etc.) shall be used, see 11.4.1.

12.1.4 Valves handling

Maintenance personnel shall be instructed on how to handle oxygen valves to ensure cleanliness between site delivery, storage and installation. For details see Sections 9 and 11.

12.1.5 Assembly

The training shall follow the valve manufacturer's assembly and installation guidelines. For spare part handling see 11.4.

12.1.6 Training records

Training records shall be kept and competency shall be assessed.

13 Quality assurance, quality control measures for valves and spare parts

Quality control needs to be a joint effort between the valve specifier, valve manufacturer, construction company and maintenance company. The required quality can only be achieved if a common understanding of what needs to be done is established. It is necessary that the valve specifier develops trust in a valve supplier's quality control.

To achieve this, the following points shall be reviewed with all involved sub suppliers:

- Qualification (for example audit) of the vendor to demonstrate their capability in the field of oxygen equipment;
- Product inspections; proof of quality documentation of the valve manufacturer;
- Validation of quality system and design process of the valve manufacturer;
- Define responsibilities for quality for the valve manufacturer and for the valve specifier;

- Review of the valve specification for its suitability for the service intended. Ensure that the valve manufacturer understands and follows the specification requirements (for example cleanliness and oxygen capability);
- The valve specifier shall be notified of any changes in valve manufacturer's workshop (material, assembly, cleaning, etc.) using the management of change process;
- Proof of quality of construction phase (goods inwards, storage, installation, documentation); and
- Qualification and competence of personnel.

13.1 Valve manufacturer control

13.1.1 Valve manufacturer quality control

Manufacturing should follow standard acceptable quality control guidelines to ensure repeatable manufacturing processes that produce a product compliant with the applicable specifications.

13.1.2 Valve manufacturer qualification

The valve manufacturer shall be qualified to manufacture and provide service according to the valve specifier's requirements.

Such a qualification should include:

- Reference list indicating experience with oxygen service;
- An effective and operable quality management system capable of meeting customer technical specifications and requirements;
- Resource management/human resources – training/competences for oxygen service;
- Lessons learnt from operations, maintenance, design and manufacturing;
- Principles for selection of non-metallic materials (bearings, gaskets, packings, lubricants);
- Principles for selection of metallic materials (springs, pins, washers);
- Principles of validation of the cleaning process (qualification, cleanliness verification process, cleaning room/area organization, quality of sub-supplier material);
- Validation of the valve design (see 7.2.1);
- Cascading of quality measures to sub-suppliers;
- Assembling sequence, procedure, working environment for assembly process;
- Material traceability (type of metallic/non-metallic material is used in which particular valve);
- Standard documentation (cleanliness certificate, inspection test plan (ITP), installation and maintenance instruction, packaging-procedures and preservation, labelling and marking); and
- The surface finish and roughness (Ra) shall be agreed at least for machined components and controlled according to ISO 4287 *Geometrical Product Specifications (GPS) -- Surface texture: Profile method -- Terms, definitions and surface texture parameters* or applicable national or international standard [21].

A shop tour is recommended to follow the processing of oxygen valves, with the focus in particular of the entire oxygen cleaning and assembly processes.

Qualification may be repeated in case of changes in organization, quality requirements and new products.

13.1.3 Change in manufacturing process

If the valve manufacturer institutes a change in the manufacturing process, for example a change in material, assembly, cleaning or packaging, the manufacture of the valve shall be stopped. This change shall be documented, and notification sent to the valve specifier to seek approval before manufacturing resumes.

13.1.4 Technical review

A joint review by specifier and supplier shall be conducted to ensure that the valve design meets the specification. The valve specifier shall check the valve manufacturer's documentation prior to commencing manufacture.

This includes:

- design drawings;
- material; and
- inspection and test plan (ITP).

If a type approval was previously carried out (meaning a specific valve model was tested, see 7.2.1) and the valve passed all quality criteria, an individual document review may not be necessary.

13.1.5 Inspection

To check the compliance with the specifications and quality requirements inspection of purchased or overhauled valves shall be carried out. The frequency of inspections can vary with experience gained from earlier inspections. Inspections should be carried out at different stages of the valve manufacture or overhaul process and not only after the work is finished. The inspection may occur independently or be part of an audit or the qualification process.

13.1.6 Final documentation

Documentation including certified material test reports, assembly and leak testing records shall be provided by the valve supplier and verified by the valve specifier. This documentation shall be retained by the valve supplier and shall be available upon request from the valve specifier. In addition to the normal final documentation the following shall be required for oxygen application:

- certificates of compliance (cleanliness check, material test report, material certificate) and
- maintenance, installation, storage and operating instructions specific for oxygen or generic documentation provided by the valve manufacturer.

13.1.7 Packaging and shipping

Valves shall be packed and tagged after testing and stored in a clean dry location until shipped.

13.2 Construction site management

The construction contractor is responsible for following all specifications and shall notify the valve specifying organization by written acknowledgment that they understand the specification requirements for cleanliness and oxygen compatibility.

13.2.1 Construction contractor qualification

The contractor shall be qualified to install valves according to valve specifier's requirements. This process mainly consists of:

- material receiving process;
- material storage; and
- installation.

Oxygen awareness training for a contractor already approved for oxygen service can be sufficient.

13.2.2 Material receiving

In addition to site receiving material procedures site receiving and quality control assurance personnel shall also:

- check integrity of valve packaging and labelling; and
- check the packaging for visual indications of gross contamination (for example liquids, rust) without opening the package.

If unsure of valve cleanliness, open the package and perform a visual cleanliness check. For this check the valve shall not be disassembled.

If the packaging is found opened or damaged, re-cleaning of the valve shall be necessary before storage. This can either be carried out on site or the valve will have to be sent back to the valve manufacturer.

13.2.3 Storage

Oxygen valves shall be stored in a designated area of the warehouse which is marked 'oxygen equipment area'. If the packaging is found opened or damaged, re-cleaning of the valve will be necessary. This can either be carried out on site or the valve will have to be sent back to the valve manufacturer.

13.2.4 Installation

Immediately before installation of valves a visual cleanliness inspection shall take place and shall be documented, see 8.2. Only valves without visible contamination shall be installed. For this inspection the valve shall not be disassembled. Care shall be taken not to contaminate the valve during handling. Oil and grease shall not be used for the installation of oxygen valves.

14 References

Unless otherwise specified, the latest edition shall apply.

- [1] ASTM G63, *Standard Guide for Evaluating Nonmetallic Materials for Oxygen Service* www.astm.org
- [2] AIGA 005, *Fire Hazards of Oxygen and Oxygen Enriched Atmospheres*, www.asiaiga.org
- [3] AIGA 021, *Oxygen pipeline and piping systems*, www.asiaiga.org
- [4] ASTM G94, *Standard Guide for Evaluating Metals for Oxygen Service* www.astm.org
- [5] ASTM G124, *Standard Test Method for Determining the Combustion Behavior of Metallic Materials in Oxygen-Enriched Atmospheres* www.astm.org

- [6] ASTM G72, *Standard Test Method for Autogenous Ignition Temperature of Liquids and Solids in a High-Pressure Oxygen-Enriched Environment* www.astm.org
- [7] ASTM G86, *Standard Test Method for Determining Ignition Sensitivity of Materials to Mechanical Impact in Ambient Liquid Oxygen and Pressurized Liquid and Gaseous Oxygen Environments* www.astm.org
- [8] ASTM D-2512, *Standard Test Method for Compatibility of Materials with Liquid Oxygen (Impact Sensitivity Threshold and Pass-Fail Techniques)* www.astm.org
- [9] EN 1797, *Cryogenic vessels. Gas/material compatibility* www.cen.eu
- [10] M034-1, *List of nonmetallic materials compatible with oxygen by BAM Federal Institute for Materials Research and Testing of the German Social Accident Insurance Institution for the raw materials and chemical industry* www.bgrci.de
- [11] CGA G-4.1, *Cleaning equipment for oxygen service* www.cganet.com
- [12] AIGA 012, *Cleaning of equipment for oxygen service* www.asiaiga.org
- [13] ASTM G93 *Standard Practice for Cleaning Methods and Cleanliness Levels for Material and Equipment Used in Oxygen-Enriched Environments* www.astm.org
- [14] AIGA 011, *Work permit systems* www.asiaiga.org
- [15] AIGA 066, *Selection of personnel protective equipment* www.asiaiga.org
- NOTE This publication is part of an international harmonization programme for industry standards. The technical content of each regional document is identical, except for regional regulatory requirements. See the referenced document preface for a list of harmonized regional references.
- [16] AIGA 010, *Management of change*, www.asiaiga.org
- [17] AIGA 008, *Hazards of inert gases and oxygen depletion* www.asiaiga.org
- [18] CGA SB-2 *Oxygen-Deficient Atmospheres* www.cganet.com
- [19] BS 7786, *Specification for unsintered PTFE tapes for general use* www.bsigroup.co.uk
- [20] Commercial Item Description (CID) A-A-58092, *Tape Antisieze, PTFE* www.wbdg.org
- [21] ISO 4287, *Geometrical Product Specifications (GPS) -- Surface texture: Profile method -- Terms, definitions and surface texture parameters* www.iso.org